

Activation: Use this function to activate a gift card.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
ACTIVATE RELOAD REDEEM	Touch 1 (Activate)
PLEASE SWIPE CARD	Swipe card
ENTER AMOUNT \$0.00	Key amount and press Enter
DIALING...	Terminal communicates to the host for approval.
APPROVED #####	
PRINT CUSTOMER RECEIPT NO YES	Touch desired option

Redeem: Use this function to redeem full or partial value from an account.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
ACTIVATE RELOAD REDEEM	Touch 3 (Redeem)
REDEEM PRE POST AUTH AUTH	Touch 1 (Redeem)
PLEASE SWIPE CARD	Swipe card or key account number and press Enter
ENTER AMOUNT \$0.00	Key amount and press Enter
DIALING...	Terminal communicates to the host for approval.
APPROVED #####	
PRINT CUSTOMER RECEIPT NO YES	Touch desired option

Reload: Use this function to add more value to an already activated card.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
ACTIVATE RELOAD REDEEM	Touch 2 (Reload)
PLEASE SWIPE CARD	Swipe card or key account number and press Enter
ENTER AMOUNT \$0.00	Key amount and press Enter
DIALING...	Terminal communicates to the host for approval.
APPROVED #####	
PRINT CUSTOMER RECEIPT NO YES	Touch desired option

Balance Inquiry: Use this function to determine the remaining value on a card.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
CASH BAL MORE OUT INQUIRY	Touch 5 (Balance Inquiry)
PLEASE SWIPE CARD	Swipe card or key account number and press Enter
DIALING...	Terminal communicates to the host for information
APPROVED #####	Press Clear to return to idle prompt

Close: Use this function to clear all the current Gift Card transactions in the terminal.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
CASH BAL MORE OUT INQUIRY	Touch 6 (More)
TRANSFER VOID CLOSE	Touch 3 (Close)
CLOSE BATCH? NO YES	Touch 3 (Yes)
BATCH CLOSE COMPLETE	Press Clear to return to idle prompt

Balance Transfer: Use this function to transfer all the value from one card to another non-activated card.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
CASH BAL MORE OUT INQUIRY	Touch 6 (More)
TRANSFER VOID CLOSE	Touch 1 (Transfer)
ENTER OLD CARD #	Key account number and press Enter
SWIPE NEW CARD	Swipe card
DIALING...	Terminal communicates to the host for approval
APPROVED #####	
PRINT CUSTOMER RECEIPT NO YES	Touch desired option

Void: Use this procedure to void a previous Gift Card transaction in the current batch.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
CASH BAL MORE OUT INQUIRY	Touch 6 (More)
TRANSFER VOID CLOSE	Touch 2 (Void)
ENTER TRANSACTION SEQ # FROM RECEIPT	Key sequence number and press Enter
AMOUNT \$0.00 CARD # ##### TRAN NUMBER # SYS TRACE # ##### AUTH CODE ##### SEQ # #### NO YES DETAIL	Touch 2 (Yes)
VOID THIS TRANSACTION? NO YES	Touch 3 (Yes)
DIALING...	Terminal communicates to the host for approval.
APPROVED #####	
PRINT CUSTOMER RECEIPT NO YES	Touch desired option

Reports: Use this function to print a report of transactions in the current Gift Card batch.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
CASH BAL MORE OUT INQUIRY	Touch 6 (More)
REPRINT PRINT MORE REPORTS	Touch 5 (Print Reports)
BATCH CARD SERVER TOTALS DETAILS DETAILS BATCH HISTORY	Touch desired option
BATCH CARD SERVER TOTALS DETAILS DETAILS BATCH HISTORY	Press Clear to return to idle prompt

Cash Out: This function allows the consumer to receive all of the stored value on an activated card as cash.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
CASH BAL MORE OUT INQUIRY	Touch 4 (Cash Out)
PLEASE SWIPE CARD	Swipe card or key account number and press Enter
DIALING...	Terminal communicates to the host for approval.
PRINT CUSTOMER RECEIPT NO YES	Touch desired option
APPROVED ##### PAYOUT \$\$.\$\$	Press Clear to return to idle prompt

Pre Auth: Use this function to obtain pre-authorization for an estimated amount.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
ACTIVATE RELOAD REDEEM	Touch 3 (Redeem)
REDEEM PRE POST AUTH AUTH	Touch 2 (Pre Auth)
PLEASE SWIPE CARD	Swipe card or key account number and press Enter
ENTER AMOUNT \$0.00	Key pre-auth amount and press Enter
DIALING...	Terminal communicates to the host for approval
APPROVED #####	
PRINT CUSTOMER RECEIPT NO YES	Touch desired option

Post Auth: Use this function to capture a Voice Authorization or Authorization Only in the current, unsettled batch.

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER	Touch 3 (Other)
REPRINT HELP MORE	Touch 6 (More)
VOID REFUND GIFT CARD	Touch 3 (Gift Card)
ACTIVATE RELOAD REDEEM	Touch 3 (Redeem)
REDEEM PRE POST AUTH AUTH	Touch 3 (Post Auth)
ENTER TRANSACTION SEQ # FROM RECEIPT	Key sequence number and press Enter
CONFIRM TRANSACTION SEQ# #### ##### NO YES	Touch 3 (Yes)
ENTER AMOUNT \$0.00	Key amount and press Enter
DIALING...	Terminal communicates to the host for approval
APPROVED #####	
PRINT CUSTOMER RECEIPT NO YES	Touch desired option

GIFT CARD

FIRST DATA FD SERIES

QUICK REFERENCE GUIDE

{751UN100, 751UN100}